

Carpo Series Standard Quick Setup Guide

Getting Started

- 1. Plugging the Power Cable (Figure 1)**
 - a. Plug the AC power cord into the power socket of the AC power adapter.
 - b. Plug the other end of the AC power cord to a live AC wall outlet.
 - c. Plug the connector of the AC adapter to the DC-IN port found at the left side of the Carpo System.



Figure 1

- 2. Turning on the Carpo System (Figure 2)**
 To turn on the Carpo System, press the power button. The power LED will light up to indicate that the Carpo System is on.



Figure 2

Main Packing List		QTY			QTY			QTY
Main system	1	Utilities CD	1	Quick Setup Guide	1			
Power Adapter	1	Power Cord	1	Corner Rubber Screw	4			
Corner Rubber	4	Shoulder Strap	1	Hand Strap	1			
Stylus	1	Hook Screw	6	Desiccant	1			


Accessories (Option)		QTY			QTY			QTY
Barcode Scanner	1	MSR	1	DeskTop Dock	1			
Vehicle Dock	1	Vehicle Power Adapter	1	Battery Charger	1			
GPS	1	GPS/Tracker	1	Carrying Case	1			
Handle Secures	1	More						

Exploring Your Carpo System


Overview of the Carpo System



Front Side of the Carpo System

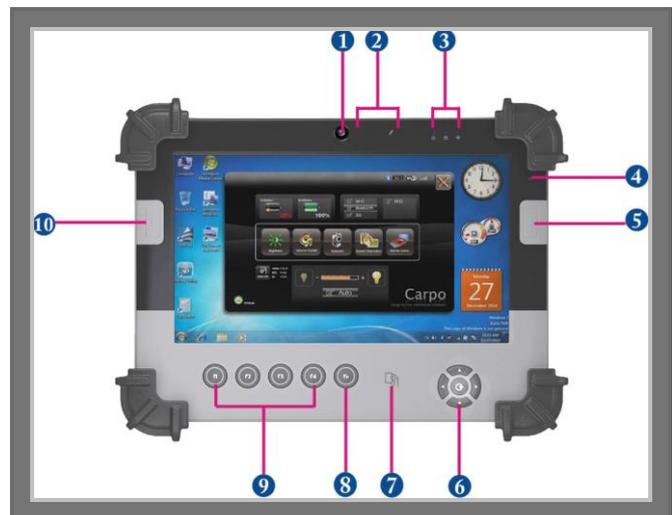


Bottom Side of the Carpo System

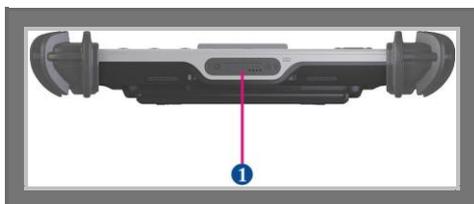


1. Docking Connector


1. Camera/1.3 Mega-pixel
2. Digital Microphone
3. LED Power/Storage/Wi-Fi
4. Light Sensor
5. Barcode Button
6. Navigation Buttons
7. RFID
8. User Interface Button
9. Program Function Buttons
10. Barcode Button

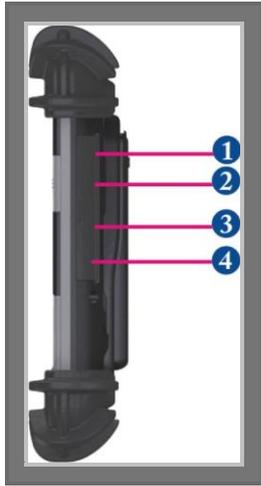Right Side of the Carpo System

1. Microphone port
2. Headphone port
3. USB port
4. USB port

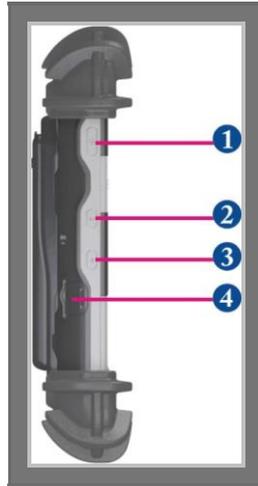Left Side of the Carpo System

1. Power Button
2. Lock Button
3. RF Button
4. DC-Jack

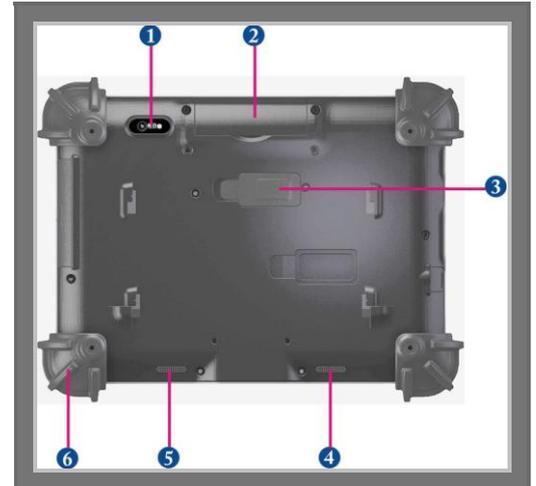Rear Side of the Carpo System


1. Camera/2 Mega-pixel
2. SIM Card/Optional Accessories Door
3. External Battery Connector
4. 5. Speakers
6. Protective Rubbers

Installing Your Hand Strap or Shoulder Strap

Tablet PC provides you an optional detachable hand strap and shoulder strap. You can use the hand strap or shoulder strap to carry the Tablet PC securely and safely when you are outside your home or office.


**Hand Strap****Shoulder Strap****Hook Screws****Replacing by the hook screws:**

To attach the hand strap and shoulder strap to carry the Tablet PC, please replace the four short screws with hook screws as shown below.

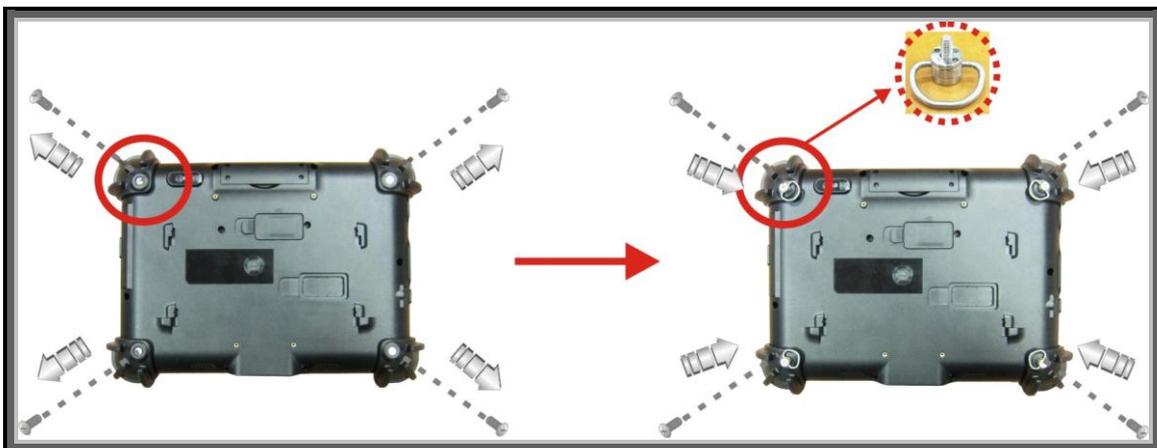


Attaching the hand strap:

Attach the hand strap to the rear of your Tablet PC with sticking the hooks both on the hand strap and Tablet PC. Ensure the hand strap is securely attached. The hand strap makes it easy to carry the device on one hand.

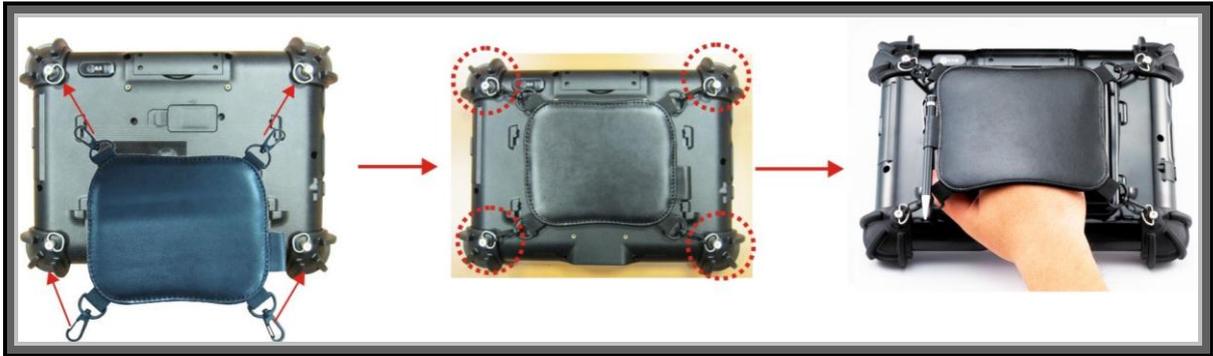

Attaching the shoulder strap:

To attach the shoulder strap to the rear of your tablet PC, please hook shoulder strap with the two hook screws on the Tablet PC as shown right.

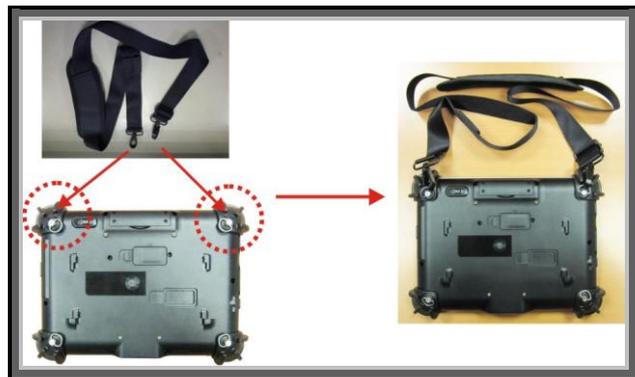

Installing External Module Pack (Optional)

Installing battery pack:

For installing the battery pack, remove the cover of the external battery connector (step 1) and place it on the lower position (step 2). Then screw the battery frame at the rear side (step 3) for placing the battery pack (step 4). Please assure the battery pack is snapped into the external battery connector and external battery hook firmly (step 5).



Installing Barcode Scanner and MSR Module:


The Carpo System provides barcode scanner and car reader functions for your optional selection, before installing either of these two modules on the top side of the system, please remove the screws previously (illustrated in the following graphics as indicated step 1).

This system offers Barcode/MSR Transfer Board for screwing into the mainboard before you install the Barcode or MSR module. For installing Barcode Scanner module, please switch the DIP 1/2 to "ON" and DIP 3/4 to "OFF" on this board; for installing MSR module, please switch the DIP 1/2 to "ON" and DIP 3/4 to "OFF" on this board (illustrated in the following graphics as indicated step 2).


After switch the DIP, screw the transfer board to the mainboard (illustrated in the following graphics as indicated step 3).

Then connect the Barcode Scanner or MSR module to the transfer board, and screw this module to the system. (illustrated in the following graphics as indicated step 4).


Step1

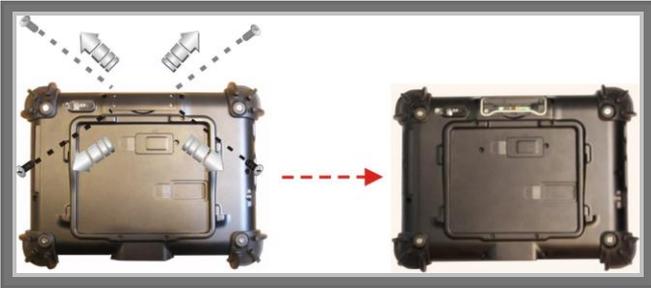

Step3

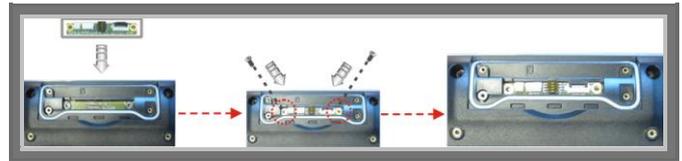

Step2

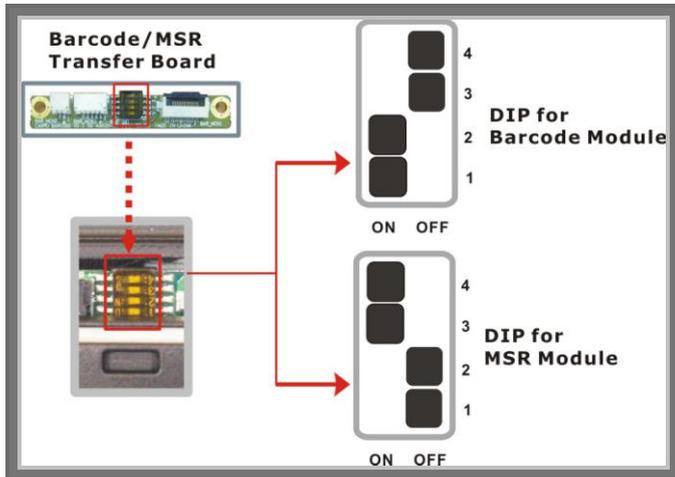

Step4




Installing Tracker Module:

Your Carpo System is designed with equipped the optional Tracker module, before installing this module on the top side of the system, please remove the screws previously (illustrated in the following graphics as indicated step 1).

Then screw the transfer board into the mainboard (illustrated in the following graphics as indicated step 2), and connect the Tracker module to the transfer board, and screw this module to the system. (illustrated in the following graphics as indicated step 3).


Step1

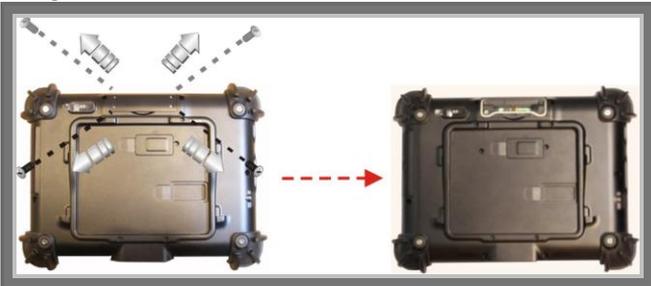

Tracker Transfer Board



Step2

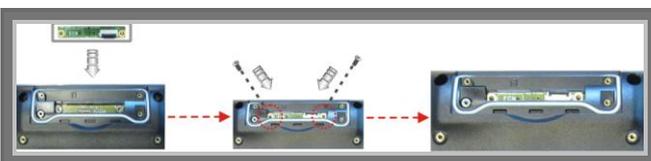

Step3

